



INSTRUCTION MANUAL

VIBRATING WIRE DISPLACEMENT TRANSDUCERS

JM Series

© Roctest Limited, 2014. All rights reserved.

This product should be installed and operated only by qualified personnel. Its misuse is potentially dangerous. The Company makes no warranty as to the information furnished in this manual and assumes no liability for damages resulting from the installation or use of this product. The information herein is subject to change without notification.

Tel.: 1.450.465.1113 • 1.877.ROCTEST (Canada, USA) • 33.1.64.06.40.80 (France) • 41.91.610.1800 (Switzerland)

www.roctest.com

E1057C-140422

TABLE OF CONTENTS

| | | |
|----------|--|----------|
| 1 | GENERAL DESCRIPTION | 1 |
| 2 | INSTALLATION..... | 1 |
| 2.1 | Preliminary tests | 1 |
| 2.2 | Displacement Transducer Installation..... | 2 |
| 2.2.1 | JM-S – Crackmeter | 2 |
| 2.2.2 | JM-E – Embedment jointmeter | 3 |
| 2.2.3 | JM-T – Displacement transducer..... | 3 |
| 2.2.4 | Dimensions | 4 |
| 2.3 | Cables and splices | 4 |
| 3 | READING PROCEDURE..... | 4 |
| 4 | TROUBLESHOOTING..... | 7 |
| 4.1 | Unstable reading..... | 7 |
| 4.2 | No reading | 8 |
| 5 | CONVERSION TABLE (TEMPERATURE)..... | 9 |

1 GENERAL DESCRIPTION

The JM-Series jointmeter is used to measure movements such as:

- the opening or closing of cracks in dams, bridges, etc
- the amount of opening of contraction joints in concrete dams, or interfaces between rock and concrete

The jointmeter, depending on the model, can be either embedded or surface mounted, or integrated into a borehole extensometer.

The JM assembly is comprised of the following elements:

- a vibrating wire displacement transducer
- a telescopic protective housing
- 2 anchors (JM-S)
- a protective casing for embedment
- a thermistor
- an electrical cable.

A vibrating wire sensing element is linked to a spring and a connecting rod at the other end for displacement measurement. As the connecting rod is pulled out from the gage body, the spring is elongated causing an increase in tension which is sensed by the vibrating wire element. This change is measured with the readout unit.

2 INSTALLATION

2.1 PRELIMINARY TESTS

Upon receiving the jointmeter, the general condition of the jointmeter should be checked and a reading taken (including the thermistor), with the shaft extended approximately 20% of the range of the instrument. Refer to the calibration certificate supplied with each sensor. A stable reading should be seen if the shaft is held stationary. Stable readings can be difficult to obtain when the gage is not attached to the structure to be monitored.

To check the reading, follow the instructions given in the "Reading procedure" Section of this manual.

WARNING : DO NOT ROTATE THE SHAFT OF THE DISPLACEMENT TRANSDUCERS. THIS CAN CAUSE IRREPARABLE DAMAGE TO THE INSTRUMENT. WITNESS PIN IS ON THE SHAFT AND SLOT ON THE BODY TO SERVE AS A GUIDE FOR ALIGNMENT.

2.2 DISPLACEMENT TRANSDUCER INSTALLATION

2.2.1 JM-S – CRACKMETER


The threaded rods at each end of the JM can be connected to the rebar anchors for injection or to expandable anchors. The threaded rods can even be used directly to fix the JM to a metal structure in which two holes have previously been made.

Before installing the crackmeter, it is important to determine the starting point of the original measure, either in the center of the span or primarily in compression or tension. The crackmeter itself can serve as a template setup. Read the sensor with a reading station to determine the starting point and thus locate the holes in the structure. Refer to the calibration certificate.

In concrete structures or rocks, rebars are grouted into the material and the rod ends are then screwed into the rebars. Drill (2) 50mm deep holes as a minimum of the proper diameter at the proper location for the rebars. Grout the pieces of rebar (keeping the threaded end uppermost) into the concrete with quick setting cement or epoxy. Attach the gage onto the rebars.

For installation on a metal structure, drill holes ($\frac{1}{4}$ -28-UNF / 6.35 mm) 25 mm deep, and tapping required 20 mm. Detach one of the JM threaded rods and screw it on the structure to the desired depth using the locknuts. Adjust the tilt and height you want for the crackmeter, then repeat for the other end of JM.

After installing the anchors, a final adjustment of the position of the sensor is possible. To do this: attach to one anchor the end of the sensor fitted with the coil, then loosen lock nut located on the other sensor's end (**while holding the sensor rod to prevent it from rotating**). Unscrew or screw the thread universal joint to change its position relative to the sensor. Tighten the lock nut and secure the sensor to the other anchor.

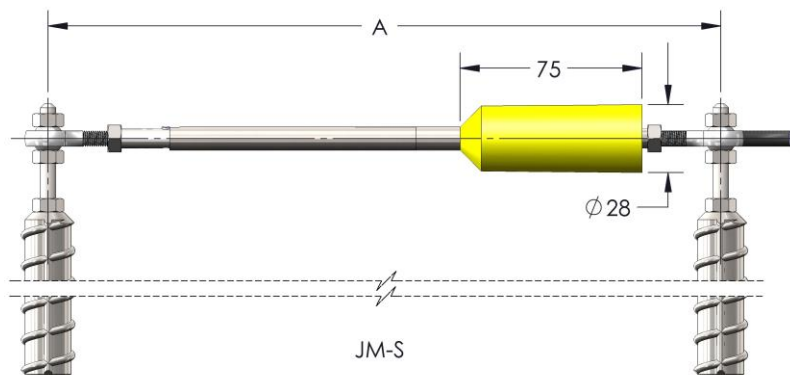


(Dimensions are in mm)

2.2.2 JM-E – EMBEDMENT JOINTMETER


The JM-E embedment jointmeter consists of 2 parts: the socket and the gage by itself. The socket is installed in the first lift of concrete. The finished face of the socket must be accessible for installing the gage on the second lift. There is a protective plug with a 5/16" – 18 threads.

After the forms of the first lift are dismantled, the socket is exposed. The plug is then removed and grease is put on the thread of the socket to ease installation of the gage. Place thread-locking compound to secure the gage to the socket and screw the gage into the socket. Secure the body of the gage and cable for the second lift of concrete. Another set of readings should be taken before concrete is set. Please adjust the gage allowing compression. Avoid pouring concrete directly onto the instrument or cable. Do not use mechanical vibrators in the immediate area of the jointmeter or cable. If necessary, hand place and/or puddle the concrete around the jointmeter. Take a reading before and after pouring of the concrete.

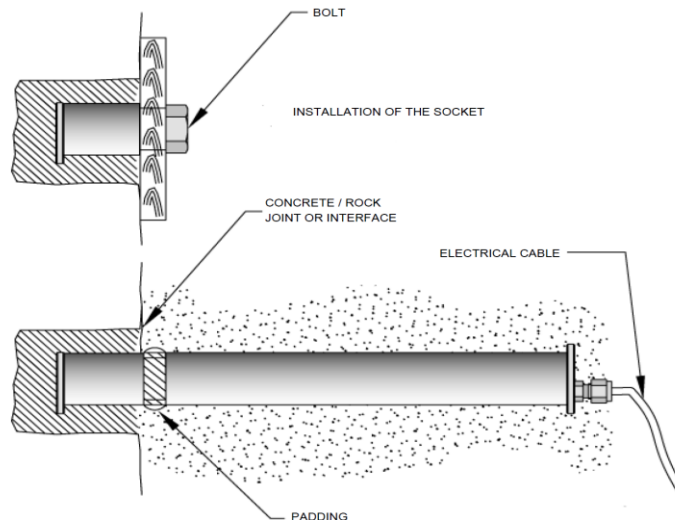

2.2.3 JM-T – DISPLACEMENT TRANSDUCER

The JM-T displacement transducer can be configured to be installed in borehole extensometers, in which case it is called JM-T.

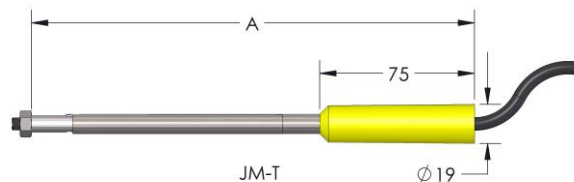

(Dimensions are in mm)

2.2.4 DIMENSIONS

Dimensions to take into considerations when installing any JM are given in table below:

| Model | | Position | Extent of measurement in mm | | | | | | |
|-------------------------|--------------------|-----------|-----------------------------|-----|-----|-----|-----|------|------|
| | | | 25 | 50 | 100 | 150 | 200 | 250 | 300 |
| JM-T (without joint) | Length (A) (mm) | Start | 214.5 | 270 | 388 | 514 | 634 | 746 | 864 |
| | | Mid range | 227 | 295 | 438 | 589 | 734 | 871 | 1014 |
| | | End | 239.5 | 320 | 488 | 664 | 834 | 996 | 1164 |
| JM-S (with joint) | Length (A) (mm) | Start | 277 | 332 | 450 | 576 | 697 | 808 | 926 |
| | | Mid range | 289.5 | 357 | 500 | 651 | 797 | 933 | 1076 |
| | | End | 302 | 382 | 550 | 726 | 897 | 1058 | 1226 |
| JM-E | Length (A) (mm) | Start | 383 | 432 | 602 | 772 | - | - | - |
| | | Mid range | - | - | - | - | - | - | - |
| | | End | - | - | - | - | - | - | - |

End 

Mid Range 

Start 

2.3 CABLES AND SPLICES

At all times during the installation, any cable must be protected against mechanical damages and against lightening when exposed outdoor. A large grounded metal cage placed over the cable bundle combined with direct grounding of all leads and shields are an effective way to prevent lightening damage to the instruments. Cable splices are to be avoided. If necessary, use only the manufacturer's approved standard or high-pressure splice kit. Splicing instructions are included with the splice kit.

3 READING PROCEDURE

Readings and temperature are taken either directly to the end of the cable, or by means of a switch panel, using the reading station MB-3TL.

The reading station comes with a cord that has 4 alligator clips at one end. Connect the alligator clips to the gauge according to the following table.

| Cables IRC-41A and IRC-390 | Color of the clip | Sensor cable |
|----------------------------|-------------------|--------------|
| Coil (+) | Red | Red |
| Coil (-) | Black | Black |
| Temperature (-) | White | White |
| Temperature (+) | Green | Green |
| Armoring (drain) | Non | Drain wire |

Wiring code for electrical cables

The vibrating strings and thermistors are normally insensitive to polarity changes, but if difficulties are encountered when reading the gauge, check if the polarity is consistent with the legend of connection.

TO OBTAIN A READING, SET READOUT TO "HZ² + THERMISTOR" WHEN USING A MB-3TL AND TO POSITION C OR B (FREQUENCY SWEEP). PLEASE REFER TO THE INSTRUCTION MANUAL OF THE MB-3TL FOR MORE DETAILS ABOUT READING PROCEDURE

The MB-3TL stimulates the sensor at intervals of two seconds and displays the sensor reading and the temperature (in degrees Celsius). For measuring the displacements, apply the following equation based on the linear units displayed on the MB-3TL:

$$D = A \cdot L^2 + B \cdot L + C$$

where D = displacement in millimetres

A, B, C = calibration factors

L = reading in LINEAR units (LU)

Example:

With $L = 6\ 000$ LU

$A = -1.0839\text{E-}08$ mm/LU²

$B = 4.6608\text{E-}03$ mm/LU

$C = -1.4810\text{E+}01$ mm

We get: $D = 12.76$ mm

Note that increasing readings in D units indicate increasing displacement. To get the relative displacement, just subtract the initial reading to the current reading.

$$D_r = D - D_0$$

where D_r = relative displacement in millimetres

D = current reading in millimetres

D_0 = initial reading in millimetres

If the frequency is measured, convert it into LINEAR units using the following equation:

$$L = k (F^2 / 1000)$$

where L = reading in LU

k = gage constant for displacement transducer = 1.00

F = frequency in Hz

Example:

With $F = 1\,739$ Hz,

We get: $L = 1.0 (1739^2 / 1000) = 3\,024.1$ LU

| CALIBRATION DATA SHEET | | |
|--|--------------------|----------------------------|
| VIBRATING WIRE DISPLACEMENT TRANSDUCER | | |
| Model: | JM-T | |
| Serial number: | 057C12909 | |
| Range: | 200 mm | |
| Thermistor type: | 3 kohms | |
| Cable model: | IRC-41A | |
| Cable length: | 10 ft | |
| Color code: | red & black (coil) | green & white (thermistor) |
| Displacement mm | Reading LU | F. S. Error % |
| 50,00 | 3579,9 | 0,01 |
| 100,00 | 5209,7 | -0,02 |
| 150,00 | 6822,2 | 0,02 |
| 200,00 | 8427,4 | -0,01 |
| Max. error (%): | | 0,02 |
| A: | 7,2933E-08 | mm/LU ² |
| B: | 3,0074E-02 | mm/LU |
| C: | -5,8612E+01 | mm |
| <i>Displacement is calculated with the following equation:</i> | | |
| $D = AL^2 + BL + C$ | | |
| D : Displacement in mm | | |
| A,B,C: Calibration factors | | |
| L : Current reading in linear units (LU) | | |

Effect of temperature:

Each JM is provided with a thermistor. The following formula is used to perform compensation for the effect of temperature on the sensor:

$$D_r = (D - D_0) - K(T - T_0)$$

where

D_r = relative displacement in millimetres

D = actual reading in millimetres

D_0 = initial reading in millimetres

K = thermal coefficient of sensor in mm/°C

T = actual temperature in degree Celsius

T_0 = initial temperature in degree Celsius

| Range of the JM (mm) | K (mm/°C) | (%FS/°C) |
|----------------------|-----------|----------|
| 25 | -0.00825 | -0.033 |
| 50 | -0.062 | -0.031 |
| 100 | -0.026 | -0.026 |
| 200 | -0.044 | -0.022 |
| 300 | -0.057 | -0.019 |

These are averages. Determination of factors is unique to each sensor and can be made on request.

4 TROUBLESHOOTING

Maintenance and troubleshooting of vibrating wire transducers are required. Periodically check cable connections and terminals. The transducers themselves are sealed and cannot be opened for inspection.

4.1 UNSTABLE READING

- Check if the same troubles occur with other instruments. If so, compare cable routes or check the readout unit.

- Is the shield drain wire correctly connected to the readout unit?

- Isolate the readout unit from the ground by placing it on a piece of wood or similar non-conductive material.
- Check the battery of the readout unit.
- Check for nearby sources of electrical noise such as motors, generators, electrical cables or antennas. If noise sources are nearby, shield the cable or move it.
- If a data logger is used to take the readings, are the swept frequency excitation settings well adjusted? Use the calibration sheet and the frequency - LU for the frequency range
- The sensor may have gone outside its range. See previous records.
- The sensor body may be shorted to the shield. Check the resistance between the shield drain and the sensor housing.
- Check the integrity of the cable.
- The sensor may have been damaged by shocks.

4.2 NO READING

- Check the battery of the readout unit.
- Check if the same troubles occur with other instruments. If so, the readout unit may be defective. Please contact Roctest.
- If a data logger is used to take the readings, are the swept frequency excitation settings well adjusted? Use the calibration sheet and the frequency - LU for the frequency range. Make sure the reading doesn't exceed the range of the sensor.
- The sensor may have gone outside its range. See previous records.
- Check the coil resistance. Nominal coil resistance is $190\Omega \pm 10\Omega$, plus cable resistance (22 gage copper = approximately $0.07\Omega/m$).
 - If the resistance is high or infinite, a cut cable must be suspected.
 - If the resistance is low or near zero, a short must be suspected.
 - If resistances are within the nominal range and no reading is obtained, the transducer is suspect and the factory should be consulted.
- Cuts or shorts are located, the cable may be spliced in accordance with Roctest recommended procedures.
- The sensor may have been damaged by shocks or water may have penetrated inside its body. There is no remedial action.

If troubles occur when reading the temperature, this is likely due to a cable cut or short because of the technology used (simple thermistor). Check the cable and splice it in accordance with recommended procedures.

5 CONVERSION TABLE (TEMPERATURE)

| Temp. °C | Types of resistances | | | Temp. °C | Types of resistances | | |
|-------------|----------------------|--------|--------|-------------|----------------------|------|-------|
| | 2K | 3K | 10K | | 2K | 3K | 10K |
| -50 | | 201100 | 670500 | 1 | 6208 | 9310 | 31030 |
| -49 | | 187300 | 670500 | 2 | 5900 | 8851 | 29500 |
| -48 | | 174500 | 624300 | 3 | 5612 | 8417 | 28060 |
| -47 | | 162700 | 581700 | 4 | 5336 | 8006 | 26690 |
| -46 | | 151700 | 542200 | 5 | 5080 | 7618 | 25400 |
| -45 | | 141600 | 440800 | 6 | 4836 | 7252 | 24170 |
| -44 | | 132200 | 472000 | 7 | 4604 | 6905 | 23020 |
| -43 | | 123500 | 411700 | 8 | 4384 | 6576 | 21920 |
| -42 | | 115400 | 384800 | 9 | 4176 | 6265 | 20880 |
| -41 | | 107900 | 359800 | 10 | 3980 | 5971 | 19900 |
| -40 | 67320 | 101000 | 336500 | 11 | 3794 | 5692 | 18970 |
| -39 | 63000 | 94480 | 315000 | 12 | 3618 | 5427 | 18090 |
| -38 | 59000 | 88460 | 294900 | 13 | 3452 | 5177 | 17260 |
| -37 | 55280 | 82870 | 276200 | 14 | 3292 | 4939 | 16470 |
| -36 | 51800 | 77660 | 258900 | 15 | 3142 | 4714 | 15710 |
| -35 | 48560 | 72810 | 242700 | 16 | 3000 | 4500 | 15000 |
| -34 | 45560 | 68300 | 227700 | 17 | 2864 | 4297 | 14330 |
| -33 | 42760 | 64090 | 213600 | 18 | 2736 | 4105 | 13680 |
| -32 | 40120 | 60170 | 200600 | 19 | 2614 | 3922 | 13070 |
| -31 | 37680 | 56510 | 188400 | 20 | 2498 | 3748 | 12500 |
| -30 | 35400 | 53100 | 177000 | 21 | 2388 | 3583 | 11940 |
| -29 | 33280 | 49910 | 166400 | 22 | 2284 | 3426 | 11420 |
| -28 | 31300 | 46940 | 156500 | 23 | 2184 | 3277 | 10920 |
| -27 | 29440 | 44160 | 147200 | 24 | 2090 | 3135 | 10450 |
| -26 | 27700 | 41560 | 138500 | 25 | 2000 | 3000 | 10000 |
| -25 | 26080 | 39130 | 130500 | 26 | 1915 | 2872 | 9574 |
| -24 | 24580 | 36860 | 122900 | 27 | 1833 | 2750 | 9165 |
| -23 | 23160 | 34730 | 115800 | 28 | 1756 | 2633 | 8779 |
| -22 | 21820 | 32740 | 109100 | 29 | 1682 | 2523 | 8410 |
| -21 | 20580 | 30870 | 102900 | 30 | 1612 | 2417 | 8060 |
| -20 | 19424 | 29130 | 97110 | 31 | 1544 | 2317 | 7722 |
| -19 | 18332 | 27490 | 91650 | 32 | 1481 | 2221 | 7402 |
| -18 | 17308 | 25950 | 86500 | 33 | 1420 | 2130 | 7100 |
| -17 | 16344 | 24510 | 81710 | 34 | 1362 | 2042 | 6807 |
| -16 | 15444 | 23160 | 77220 | 35 | 1306 | 1959 | 6532 |
| -15 | 14596 | 21890 | 72960 | 36 | 1254 | 1880 | 6270 |
| -14 | 13800 | 20700 | 69010 | 37 | 1203 | 1805 | 6017 |
| -13 | 13052 | 19580 | 65280 | 38 | 1155 | 1733 | 5777 |
| -12 | 12352 | 18520 | 61770 | 39 | 1109 | 1664 | 5546 |
| -11 | 11692 | 17530 | 58440 | 40 | 1065 | 1598 | 5329 |
| -10 | 11068 | 16600 | 55330 | 41 | 1024 | 1535 | 5116 |
| -9 | 10484 | 15720 | 52440 | 42 | 984 | 1475 | 4916 |
| -8 | 9932 | 14900 | 49690 | 43 | 945 | 1418 | 4725 |
| -7 | 9416 | 14120 | 47070 | 44 | 909 | 1363 | 4543 |
| -6 | 8928 | 13390 | 44630 | 45 | 874 | 1310 | 4369 |
| -5 | 8468 | 12700 | 42340 | 46 | 840 | 1260 | 4202 |
| -4 | 8032 | 12050 | 40170 | 47 | 808 | 1212 | 4042 |
| -3 | 7624 | 11440 | 38130 | 48 | 778 | 1167 | 3889 |
| -2 | 7240 | 10860 | 36190 | 49 | 748 | 1123 | 3743 |
| -1 | 6876 | 10310 | 34370 | 50 | 720 | 1081 | 3603 |
| 0 | 6532 | 9796 | 32660 | 51 | 694 | 1040 | 3469 |

| Temp. °C | Types de résistances | | | Temp. °C | Types de résistances | | |
|-------------|----------------------|-------|-------|-------------|----------------------|-------|-------|
| | 2K | 3K | 10K | | 2K | 3K | 10K |
| 52 | 668 | 1002 | 3340 | 102 | 128 | 192.2 | 640.3 |
| 53 | 643 | 965.0 | 3217 | 103 | 125 | 186.8 | 622.1 |
| 54 | 620 | 929.6 | 3099 | 104 | 121 | 181.5 | 604.4 |
| 55 | 597 | 895.8 | 2986 | 105 | 118 | 176.4 | 587.5 |
| 56 | 576 | 863.3 | 2878 | 106 | 114 | 171.4 | 571.0 |
| 57 | 555 | 832.2 | 2774 | 107 | 111 | 166.7 | 555.1 |
| 58 | 535 | 802.3 | 2675 | 108 | 108 | 162.0 | 540.0 |
| 59 | 516 | 773.7 | 2580 | 109 | 105 | 157.6 | 524.9 |
| 60 | 498 | 746.3 | 2488 | 110 | 102 | 153.2 | 510.7 |
| 61 | 480 | 719.9 | 2400 | 111 | 99 | 149.0 | 496.4 |
| 62 | 463 | 694.7 | 2316 | 112 | 97 | 145.0 | 483.1 |
| 63 | 447 | 670.4 | 2235 | 113 | 94 | 141.1 | 469.8 |
| 64 | 432 | 647.1 | 2157 | 114 | 91 | 137.2 | 457.4 |
| 65 | 416 | 624.7 | 2083 | 115 | 89 | 133.6 | 444.9 |
| 66 | 402 | 603.3 | 2011 | 116 | 87 | 130.0 | 433.4 |
| 67 | 388 | 582.6 | 1942 | 117 | 84 | 126.5 | 421.8 |
| 68 | 375 | 562.8 | 1876 | 118 | 82 | 123.2 | 410.7 |
| 69 | 363 | 543.7 | 1813 | 119 | 80 | 119.9 | 399.6 |
| 70 | 350 | 525.4 | 1752 | 120 | 78 | 116.8 | 389.4 |
| 71 | 339 | 507.8 | 1693 | 121 | 76 | 113.8 | 379.2 |
| 72 | 327 | 490.9 | 1636 | 122 | 74 | 110.8 | 369.4 |
| 73 | 316 | 474.7 | 1582 | 123 | 72 | 107.9 | 360.1 |
| 74 | 306 | 459.0 | 1530 | 124 | 70 | 105.2 | 350.8 |
| 75 | 296 | 444.0 | 1479 | 125 | 68 | 102.5 | 341.9 |
| 76 | 286 | 429.5 | 1431 | 126 | 67 | 99.9 | 333.0 |
| 77 | 277 | 415.6 | 1385 | 127 | 65 | 97.3 | 324.6 |
| 78 | 268 | 402.2 | 1340 | 128 | 63 | 94.9 | 316.6 |
| 79 | 260 | 389.3 | 1297 | 129 | 62 | 92.5 | 308.6 |
| 80 | 251 | 376.9 | 1255 | 130 | 60 | 90.2 | 301.1 |
| 81 | 243 | 364.9 | 1215 | 131 | 59 | 87.9 | 293.5 |
| 82 | 236 | 353.4 | 1177 | 132 | 57 | 85.7 | 286.0 |
| 83 | 228 | 342.2 | 1140 | 133 | 56 | 83.6 | 279.3 |
| 84 | 221 | 331.5 | 1104 | 134 | 54 | 81.6 | 272.2 |
| 85 | 214 | 321.2 | 1070 | 135 | 53 | 79.6 | 265.5 |
| 86 | 208 | 311.3 | 1036 | 136 | 52 | 77.6 | 259.3 |
| 87 | 201 | 301.7 | 1004 | 137 | 51 | 75.8 | 253.1 |
| 88 | 195 | 292.4 | 973.8 | 138 | 49 | 73.9 | 246.9 |
| 89 | 189 | 283.5 | 944.1 | 139 | 48 | 72.2 | 241.1 |
| 90 | 183 | 274.9 | 915.2 | 140 | 47 | 70.4 | 235.3 |
| 91 | 178 | 266.6 | 887.7 | 141 | 46 | 68.8 | 229.6 |
| 92 | 172 | 258.6 | 861.0 | 142 | 45 | 67.1 | 224.2 |
| 93 | 167 | 250.9 | 835.3 | 143 | 44 | 65.5 | 218.9 |
| 94 | 162 | 243.4 | 810.4 | 144 | 43 | 64.0 | 214.0 |
| 95 | 157 | 236.2 | 786.4 | 145 | 42 | 62.5 | 208.7 |
| 96 | 153 | 229.3 | 763.3 | 146 | 41 | 61.1 | 203.8 |
| 97 | 148 | 222.6 | 741.1 | 147 | 40 | 59.6 | 199.4 |
| 98 | 144 | 216.1 | 719.4 | 148 | 39 | 58.3 | 194.5 |
| 99 | 140 | 209.8 | 698.5 | 149 | 38 | 56.8 | 190.1 |
| 100 | 136 | 203.8 | 678.5 | 150 | 37 | 55.6 | 185.9 |
| 101 | 132 | 197.9 | 659.0 | | | | |

Conversion Temperature~Resistance